

SGA-440 by Prism Medical



Owner's Manual

Use and Care
Fault Finding
Warranty Information

Introduction	2
Overview	2
Components of the Sit to Stand Lift	3
Component List	4
Specifications	5
Cautions	6
Assembly Instruction	7
Operation	
Charging	12
Start	12
Forward movement	13
Turning	13
Leg Adjustment	14
Raising and Lowering Boom	14
Casters and Braking	14
Basics in transferring an individual	15
Emergency Stop & Lowering	17
Control Box-Usage Information	18
Control Box-Service Information	19
Technical Specifications	20
Do's and Don'ts	21
Trouble Shooting	22
General inspection and maintenance	23
Points of Attachment - Checklist	24
Service record history	25
Warranty	29

PRISM MEDICAL



CAUTION: DO NOT ATTEMPT TO USE THIS EQUIPMENT WITHOUT FIRST UNDERSTANDING THE CONTENTS OF THIS MANUAL.

Introduction

Before using this equipment, and to ensure the safe operation of your **SGA-440 Sit to Stand lift**, carefully read this entire manual, especially the section on “**Cautions**”. The **SGA-440** is designed to be used in conjunction with Prism Medical accessories and slings. Please refer to any user guides supplied with these components and refer to them while reviewing this manual.

Should any questions arise from reviewing this manual contact your local authorized Prism Medical Representative. Failure to comply with warnings in this manual may result in injury to either the operator, or the individual being lifted/transferred. Damage to the floor lift and/or related components may also occur. Be sure that the contents of this manual are completely understood prior to using this floor lift.

Store this manual with the documents included with the floor lift and sling (s). Contents of this manual are subject to change without prior written notice.

Overview of SGA-440 Sit to Stand lift

The **SGA-440 Sit to Stand lift** is a lifting aid used by health care professionals to transfer clients. The Sit to Stand lift makes it possible to move mobility impaired individuals with minimal strain or risk to the caregiver, while providing complete safety, dignity and comfort for the client.

The **SGA-440 Sit to Stand lift** is one of two components that make up this technology. The other component, the sling, is a specially designed fabric accessory that attaches to the floor lift by means of a carry bar and straps, and holds an individual while the lift, or transfer takes place. The sling is generally supplied with the Sit to Stand lift at the initial time of purchase. Please refer to any user guides supplied with the sling and reference them while reviewing this manual.


The **SGA-440 Sit to Stand lift** has the ability to lift an individual up from one location such as chair, then move the individual to another location and finally lower the individual into a wheelchair. The functions of lifting up or down are accomplished by pressing buttons on the hand control. The hand control is attached to the Sit to Stand lift. Due to the design of the Sit to Stand lift system, it takes very little effort to press a button to perform the desired motion.

Please familiarize yourself with the components of the **SGA-440 Sit to Stand lift** by referring to the diagram on the next page.

Model Table for SGA-440 Sit to Stand lift

Product Code	Product Description
280425	SGA-440 - Aluminum Sit to Stand Lift 440 lbs.

Components of the SGA-440 Sit to Stand lift

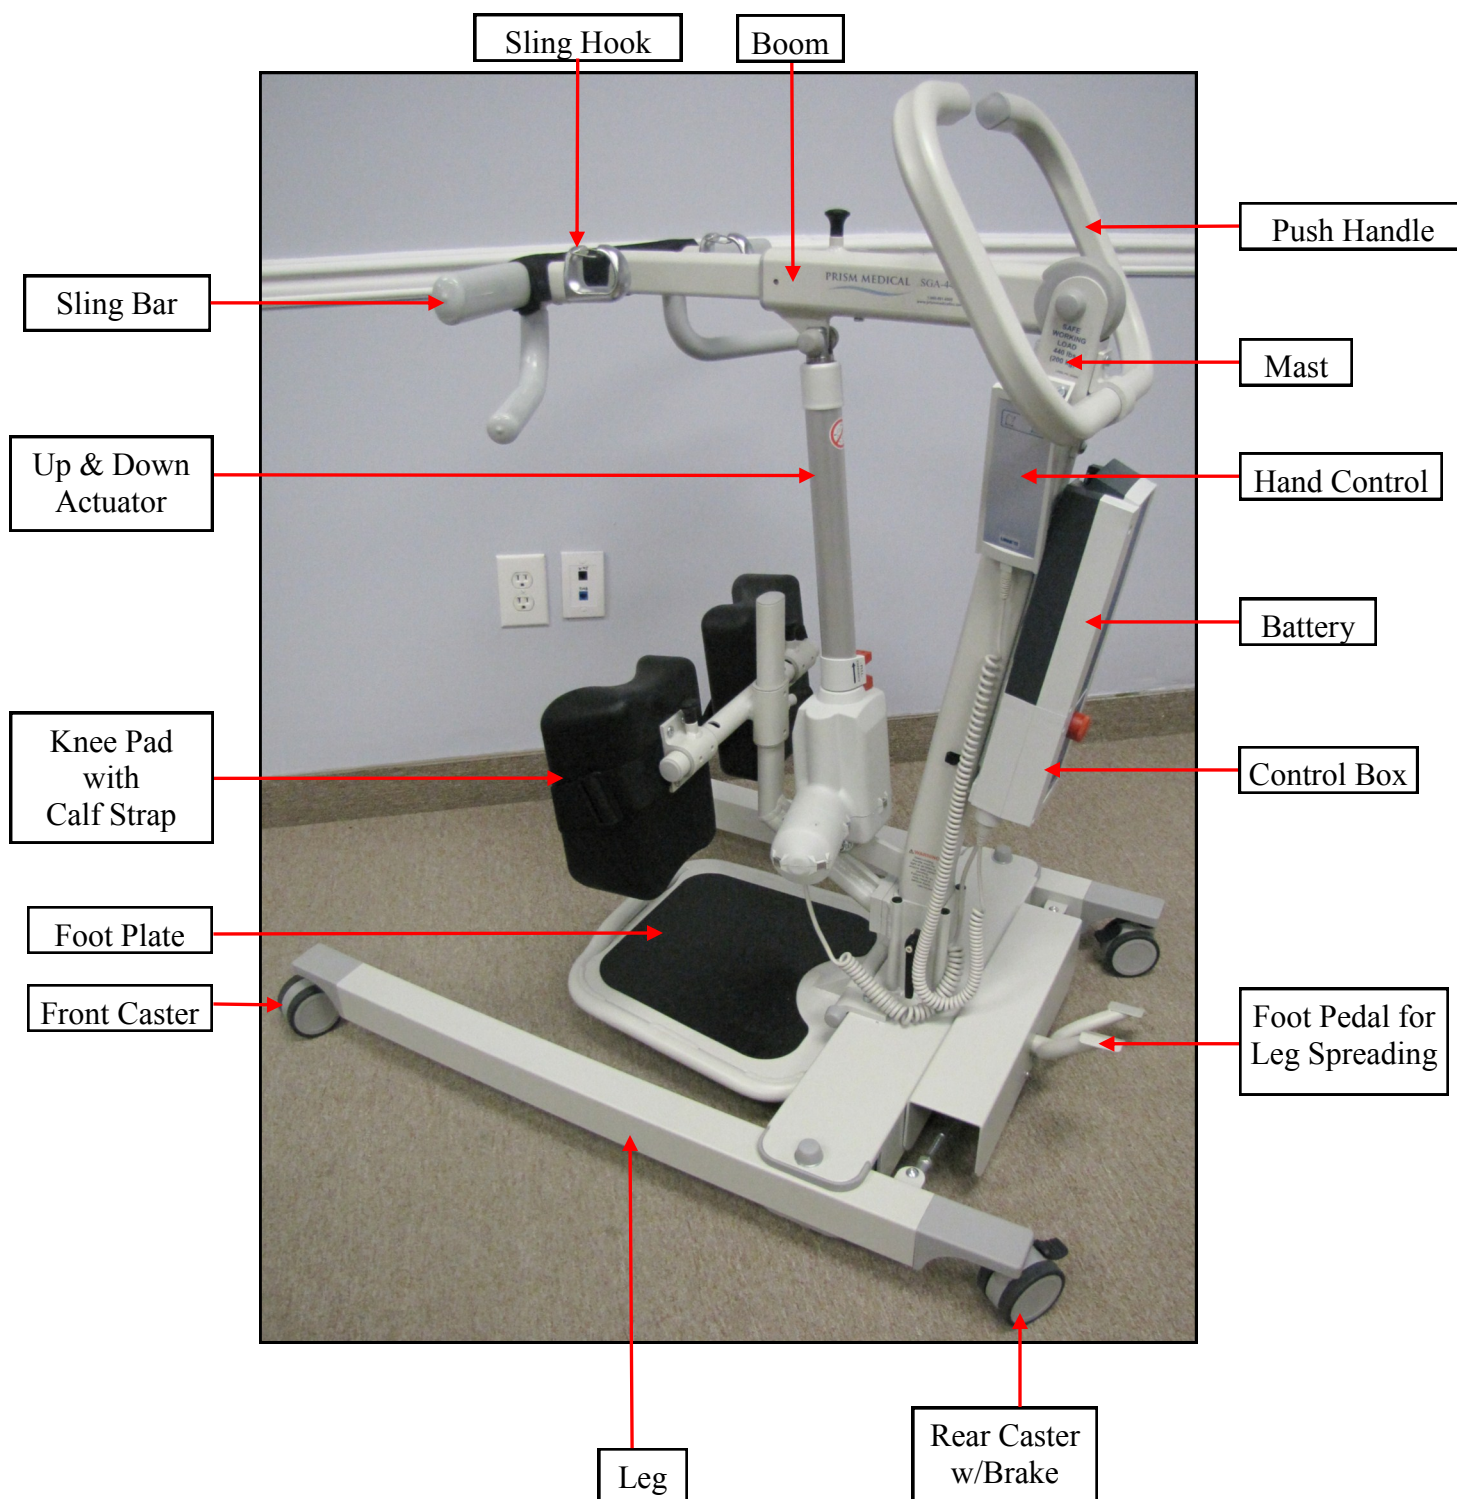

Component List

The following components are included with your new **SGA-440 Sit to Stand lift** system:

- SGA-440 Sit to Stand lift
- Hand Control
- Floor Lift Integrated Charger
- Charger Cord
- Owner's Manual
- Multi Function Wrenches




- 5 mm Hex Allen Key (Short Arm)



- 4 mm Hex Allen Key (Short Arm)



- 3 mm Hex Allen Key (Short Arm)

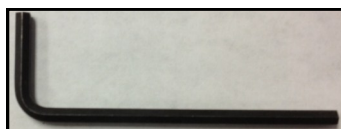

SLINGS: If a sling has been supplied with floor lift, then pl. refer to the instructions included with the sling.

ACCESSORIES: If additional accessories such as a weigh scale have been supplied with the floor lift, then pl. refer to the instructions included with those items.

IMPORTANT: Before initial use, the floor lift unit must be charged for 4 to 5 hours. Refer to section titled “**Charging Instructions**”. The Hand control must also be connected to the floor lift. If it is not connected, then pl. refer to the section titled “**Assembly Instructions**”.

Technical Specifications– SGA-440

(A) Dimensions and Weight - SGA-440 lift

Specification	SGA-440
Maximum weight capacity	440 lbs. (200 kg.)
Maximum lifting height	54.3 inches (138 cm)
Minimum lifting height	35.4 inches (90 cm)
Height to top of legs	4.3 inches (11 cm)
Clearance from bottom of legs to floor	2 inches (5 cm)
Overall length	40.7 inches (103.5 cm)
Distance inside the legs (min.)	23 inches (58 cm)
Distance inside the legs (max.)	35 inches (89 cm)
Distance outside the legs (min.)	26.8 inches (68 cm)
Distance outside the legs (max.)	39 inches (99 cm)
Turning radius	46 inches (117 cm)
Wheels (dual-wheel castors)	Front – 3” (76 mm)
	Rear – 3” (76 mm) w/brake
Weight of lift	81 lbs (36.8 kg.)
Total Shipping Weight with Box	96.44 lbs (43.83 kg.)

(B) Electrical Specifications - SGA-440 lift

Lift Motor:	24 VDC, 10.5 Amps Max.
Charger Input:	100-240 VAC, 50-60 Hz, 0.4 Amps Max.
Charger Output:	24 VDC, 0.65 Amps
Batteries:	24 VDC (2 x 12 VDC) 2.9 Ah, Sealed Lead Acid
Hand Control:	Electric
Lifting Range:	35.4” to 54.3”
Lift Weight:	81 lbs.
Maximum Load:	440 lbs.
Duty Cycle:	10% use, 90% rest
Rated Performance:	30 lifts at 440 lbs., 10% duty cycle.

Maximum load of the installed floor lift is determined by referring to the product label located on side of floor lift.

Shipping/Storage Conditions:

Temperature: -40 to +70 °C
 Relative Humidity: 10 to 100% RH
 Atmospheric Pressure: 500 to 1060 hPa

Normal Operating Conditions:

Temperature: +10 to +70 °C
 Relative Humidity: 30 to 75% RH
 Atmospheric Pressure: 700 to 1060 hPa



Cautions:

- Under no circumstance should the **SGA-440 Sit to Stand lift** and sling (s) be put in control of a person who has not been properly trained in the use and care of this equipment. Failure to adhere to this warning may result in serious injury to the operator, and/or the individual being lifted/ transferred.
- The **SGA-440 Sit to Stand lift** and sling (s) are not toys. Do not use it for unsafe practices. Do not allow children to play with the floor lift or any of its components.
- The manufacturer's warranty is voided if persons unauthorized by Prism Medical Ltd. will perform work on the **SGA-440 Sit to Stand lift**.
- There are no user serviceable parts inside the actuator. Do not remove cover screws, or open the unit, as this will **VOID THE WARRANTY**.
- In facilities where more than one operator will be responsible for using the **SGA-440 Sit to Stand lift** and sling (s), it is imperative that all such members are to be trained in its proper use. A training program should be established by the facility to acquaint new operators with this equipment.
- Never expose the **SGA-440 Sit to Stand lift** directly to water. Warranty does not cover any misuse or abuse of the floor lift system.
- To maintain optimum function, the **SGA-440 Sit to Stand lift** should be inspected and maintained on a regular basis. See the section titled “**General Inspection and Maintenance**”.
- Any accessories used with the **SGA-440 Sit to Stand lift** including sling (s), should be checked to ensure that they are in good working order. Check for signs of wear or fraying prior to use. Report any unusual wear, or damage immediately to your local authorized Prism Medical Service Provider.
- The **SGA-440 Sit to Stand lift** and associated sling (s) are intended **only** for lifting and transferring of a person. Prism Medical will not be responsible for any damage caused by the misuse, neglect or purposeful destruction of the lift, and/or its associated components.
- In any circumstances do not exceed the maximum allowable load of this lift. Refer to the “**Specifications**” section of this manual, and/or the labels on the side of the lift.
- There is a risk of explosion if the lift is used in the presence of flammable anaesthetics.
- Ensure that a clear space is maintained around the lift. Move any obstacles out of the way before operating the floor lift.

Assembly Instructions:

1. Place the Carton/Packaging box in a clear working area, open carefully, and remove following items and place on the floor, taking care to protect the finish from damage.
 - Mast with Boom assembly
 - Base Assembly with Legs attached
 - Battery Pack, Control Box and Charging Power Cord
 - Hand Control
 - Tool Kit
 - User Manual, and Test Certificate



**Caution: Lift parts are heavy, and will need to be lifted with care.
Heavier items may need two people for assembly.**

2. Place the Base assembly with legs attached on the floor, and lock both rear casters as shown in Figure 1.



Figure 1

3. Mount Knee Pad Height Adjustment Rod using four screws supplied with lift as shown in Figure 2, and 3.



Figure 2



Figure 3

Assembly Instructions:

4. Place the Mast with Boom assembly upright in the tube on the Base assembly as shown in Figure 4. Using Locking Handles, secure the lift mast in the desired position on the base as shown in Figure 5. Adjust the position of the locking handles pointing in downward direction towards the base as shown in Figure 4.



Figure 4

Lifting Actuator is not shown in the figure below to show the tightening of the locking handles.



Figure 5



Caution: Possible finger trap. Keep fingers away from the end of the mast when inserting into the tube on the Base assembly. Heavier items may need two people for assembly.

5. Route the Lifting Actuator Cable assembly as shown in the Figure 6.



Figure 6

Assembly Instructions:

6. Pull the plastic knob to insert the Knee Pad Assembly into the Knee Pad Height Adjustment Rod and release the plastic knob once it aligns with hole on Knee Pad Height Adjustment Rod as shown in Figure 7, and 8.



Figure 7



Figure 8

7. Insert the Sling Bar into the Boom of the lift by pulling plastic knob on top of the boom as shown in Figure 9. Make sure that the sling bar locking screw is out from the boom as shown in Figure 10. After inserting the sling bar, tight the sling bar locking screw so that sling bar will not be able to come out from the boom.



Figure 9



Figure 10



**Caution: Sling bar locking screw must be tight, and locked for all the times.
Failure to do so, may result in severe injury.**

Assembly Instructions:

Attaching 2 Point QRS Carry Bar to Lift:

8. Remove the screws from the mounting position of push handle on Mast assembly as shown in Figure 11. Insert the screws through the push handle bracket, and mount the push handle on the Mast Assembly as shown in figure 12.



Figure 11



Figure 12

9. Remove the middle screw from the mounting bracket using 3 mm Allan Key. Press the SGA-440 CBJ Care Control Box against the mounting bracket and slide it down. The control box should be seated securely on top of the edge of bracket as shown in Figure 13. Mount the Control Box to the mounting bracket using same screw that you removed from the middle of the bracket as shown in Figure 14.



Figure 13



Figure 14

Assembly Instructions:

10. To install the battery, you will need to press the battery against the bracket and slide it down until it sits straight on top of the control box as shown in Figure 15. Make sure to secure the battery box by latching the battery lock into the bracket as shown in Figure 16.



Figure 15



Figure 16

11. Connect all the cables to the control box as shown in the Figure 17 to 19.
- A. Connect the Hand Control connector to the large circle on the left side of the control box as shown in the Figure 17.
 - B. Connect the Up/down Actuator Cable connector to the second circle (Marked No. 1) from the left side of the control box as shown in the Figure 18.
 - C. Connect the Mains Power Cord to the rectangular outlet on the control box as shown in the Figure 19.



Figure 17

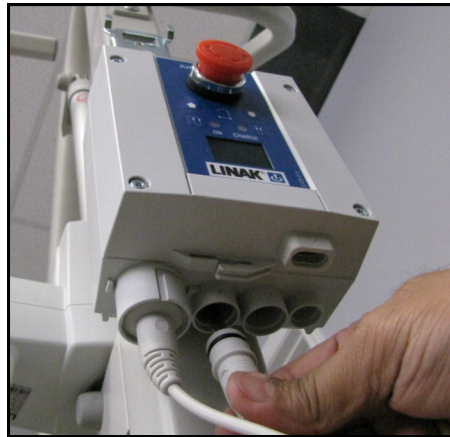


Figure 18



Figure 19

12. **Please make sure to charge battery before initial use and before each operation of floor lift.**

After assembly, check to ensure that:

1. The mast is fully locked into position.
2. The RED emergency stop button on control box is in the OFF (out) position.
3. Lifting actuator moving up and down with the buttons on the hand control, and control box.
4. Emergency lowering (mechanical, and electrical) function works properly.
5. Rear wheel brakes works properly.
6. Leg spreading foot pedal works properly.
7. Battery is fully charged.

Operation:

⚠ Caution: Visually inspect the floor lift before using for any unusual wear and tear. Should anything look unusual then contact your local representative prior to use.

Failure to comply with this caution could result in serious injury to the operator, the individual being lifted and/or damage to the lift.


Because of the safety function in the actuator the lifting arm and hanger bar can “fall down” to the height of the spindle. Therefore, both before and after each lifting operation, press the lifting arm down to ensure that it is supported by the actuator. This must be done, to remove the possibility of the lifting arm “falling down” and the risk of subsequent injury occurring.

Charging:

The “On” light illuminates when you plug the control box to the power outlet and should turn off when it is unplugged. The “Charge” light illuminates, and when you connect the battery to the control box and it is charging, also the LCD displays shows the symbol of mains cable plug in as shown in the Figure 20. The “Charge” light will turn off when the battery is finished charging.

The lift should be plugged in for charging whenever the lift is not in use to get the max number of cycles out of the battery. **An audible battery alarm will sound when approximate 25% of battery capacity remaining.** To obtain max life, charge the battery at no more than 30% discharge.

Please Note: The battery can be charged whether the Emergency Stop is activated or not.

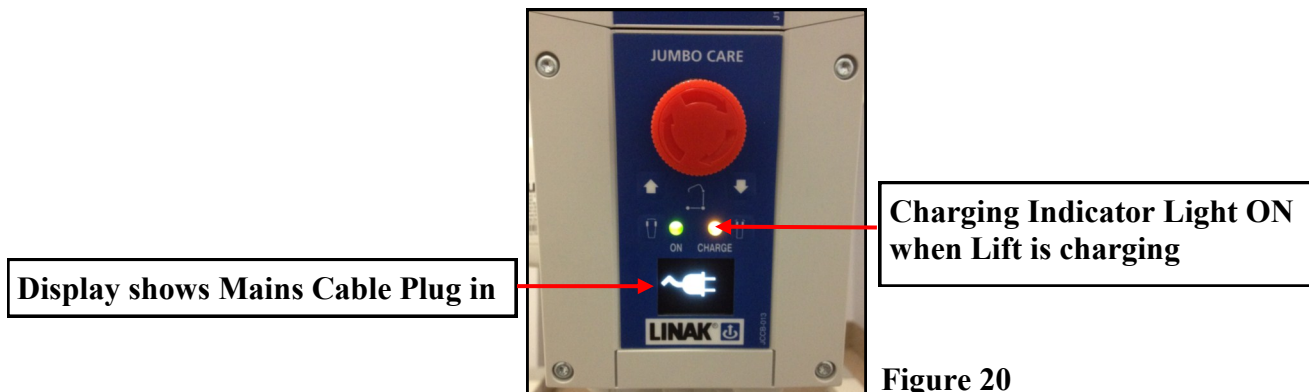

Start:

The Hand Control has two functions up and down. Press down on the symbols to operate the desired function. It is not possible to use two functions at the same time.

An audible alarm will sound once the load becomes too great on the lift. This will cause the lifting operation to stop. Do not continue to operate the handset by repeatedly pressing the buttons. At this point the lift has reached its maximum lift. This is a purposefully built in safety feature.


Please Note!

The emergency stop must be released at all times during normal operation.

Operation:

Forward Movement:

To move the lift forward, hold onto the handle bar and push forward.. Alternatively, the caregiver can also place one foot on the base tube and push forward with their foot.

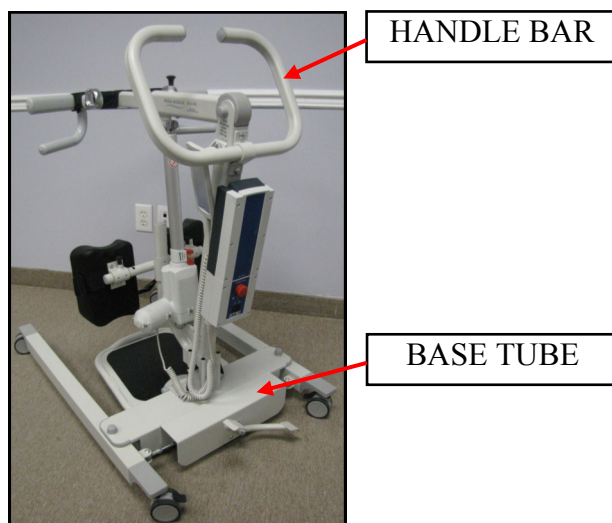

Turning:

When turning the lift, stand on along one side. With one hand pull gently on the handle bar, and with the other hand push gently away on the lifting arm. In this way the lift will rotate around its own axis. This movement is performed with a smooth, slow action to avoid swinging the patient unnecessarily.



Warning:


Do not hold on to the actuator or swing link when turning the lift as there is a risk of getting your fingers caught.

Operation:

Leg Adjustment:

The legs of SGA-440 lift are mechanically adjustable for opening, and closing base width. The legs can be opened to enable access around arm chairs or wheel chairs. For transferring through narrow doorways, and passages the lift legs should be in closed position.

Leg adjustment is achieved by pressing the foot pedal located at the rear of base. To open the legs, press down the left side, and to close the legs press down the right side as shown below.

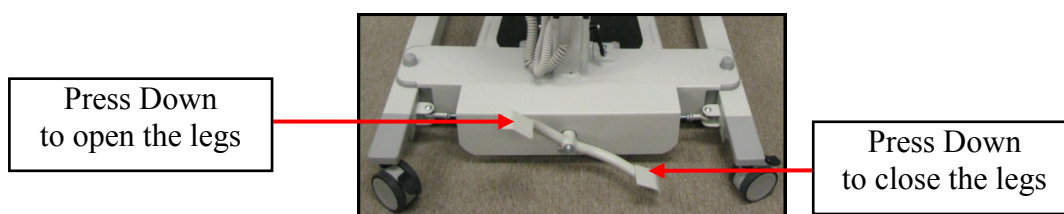

Raising and Lowering the Boom:

The up and down movement of boom on SGA-440 lift is achieved by a powerful electric actuator which is controlled by hand control. The hand control has two button with directional arrows UP and DOWN. The actuator stops automatically at the limit of travel in both directions.

Casters and Braking:

The SGA-440 lift has two rear casters with brake. The rear casters can be braked for rotation, lateral movement, and parking. To apply the brake, press the brake pedal down with your foot. To release the brake, press the raised pedal towards the wheel.

During the lifting, the rear wheels should remain unlocked so that the lift will move to the patient's centre of gravity. The wheels should, however, be locked if there is a risk of lift moving to the patient. For example, when lifting the patient from the floor.



Warning: Locked wheels during lifting will increase the risk of the lift tilt over.

Application:

If the lift is used incorrectly any warranty or product liability might cease to be valid.

The Sit to Stand lift must only be used for person lifting and only for persons who, including the sling, do not weigh more than the stated max. weight load. If the load exceeds the stated weight limit and if the lift is used for lifting anything but persons, then any product liability that Prism Medical might have, in connection with insurance / warranty / maintenance etc., will cease to be valid.

To avoid possible accidents and injury to persons being lifted, the Sit to Stand lift must only be operated as described in the preceding pages.

Basics in transferring an individual

⚠ Caution: The following steps are intended to generally illustrate the procedure involved in the lifting and transferring of an individual from one location to another using the floor lift.

The manual for the sling that was purchased with the lift should be reviewed in detail prior to attempting these steps, as the sling illustrated here may not be the same as the one that was purchased.

Contact your local authorized Prism Medical Representatives if you have any questions or concerns.

Step 1) Unplug the lift from its charging station or current location and move close to the individual that is to be transferred. Use the procedures for up and down and transferring as described in the sections titled, “**Start**”, “**Forward Movement**” and “**Turning**”.

⚠ Caution: Always use extreme care when moving the lift from one location to another. Watch out for and avoid any obstructions that may cause injury to the individual in the sling, or damage to the lift.

Step 2) Prepare the individual being transferred with the appropriate sling. Refer to the instructions supplied with the sling that was purchased on how to properly outfit an individual with a sling.

⚠ Caution: Always make sure that the sling is correctly fitted and adjusted on each side of the individual so that maximum comfort and safety are achieved prior to lifting.

Step 3) Once the individual has been outfitted with the sling, move the lift so that it is positioned directly over the individual and utilize leg opening function if required. Lower the carry bar to a height so that the straps of the sling can be easily attached to the carry bar.

⚠ Caution: Always check to ensure that the lift is correctly positioned directly above the person to be lifted.

⚠ Caution: Check to ensure that the carry bar has no cuts, dents or sharp edges that may come in contact with the straps of the sling and cause damage to them. Report any concerns to your local authorized representative.

Step 4) Attach the straps of the sling to the hooks of the carry bar. The straps on each side of the sling are generally attached to the corresponding side of the carry bar. Be sure to double check to ensure that the straps are properly attached to the carry bar, and that the individual being lifted is properly positioned in the sling prior to lifting.

⚠ Caution: Prior to lifting an individual make sure that the straps of the sling are securely placed on the hooks of the carry bar.

Basics in transferring an individual ... continued

Step 5) The individual may now be raised using the UP button on the hand control. While lifting is in progress the height required in order for the transfer to be completed safely should be closely observed. Ensure that the individual being lifted will not be injured by any obstructions during the initial lifting.

 **Caution:** Always use caution when lowering/raising an individual who is in the sling of the lift. Watch out for and avoid any obstructions that may cause injury to the individual, or damage to the lift.

Step 6) Once at the correct height the individual can be moved to the desired location. Refer to the sections already described in this manual on how to do so.

Step 7) Once at the desired location the individual in the sling can be lowered/raised to the correct height in order to complete the transfer. On completion of lowering/raising ensure that the individual is properly positioned and safely supported prior to removing the straps of the lift from the carry bar.

 **Caution:** Prior to removing the straps of the sling from the carry bar be sure to check that the individual being lifted is securely supported in the final desired position.

Step 8) Lower the carry bar sufficiently to allow the straps of the sling to be easily removed from the carry bar. Take care not to let the carry bar come in contact with the individual in the sling. The straps from the sling can now be removed from the carry bar. The lift should then be moved away from the immediate area so that it will not interfere with the removal of the sling from the client.

Step 9) The sling can now be gently removed from the individual. It should then be stored in a safe place for future use.

Step 10) The lift can now be moved to a safe location until further use, or relocated to its original location. The lift should be turned off when not in use. It is recommended that the lift be left on charge when not in operation. Refer to the section titled, “**Charging the lift**” for instructions on charging.

Emergency Stop & Lowering:

⚠ Caution: The manual emergency lowering system should be used only if the lowering procedures described in the previous section of the manual do not work. Should you have any concerns or questions contact your local authorized Prism Medical Representative.


⚠ Caution: **DO NOT** use the lift after the manual lowering mechanism has been used. The lift must be reset by a qualified lift technician after use. **Contact your local authorized Prism Medical Service Provider.**

Emergency Stop:

Push the Emergency Stop button to cut all power on the Floor Lift. To resume power, release the emergency stop button by turning in the direction as indicated by arrows on the Emergency Stop button.

Electrical emergency lowering/raising:

The lift boom is lowered or raised by pressing the UP and DOWN arrow button on the control box.

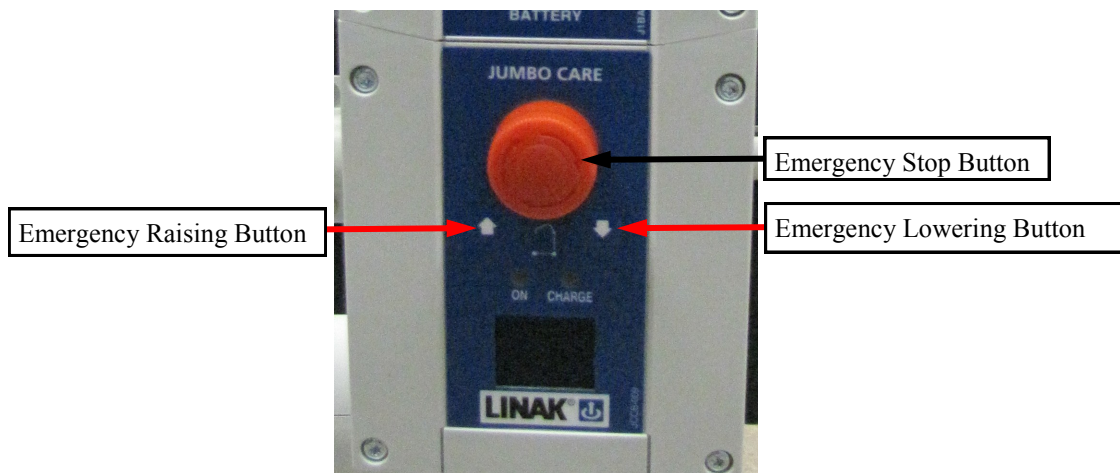

Mechanical emergency lowering:

In case of power failure, it is possible to mechanically lower a patient placed in SGA-440 lift.

In order to lower the boom in an emergency situation, pull up the red lever located directly on the lift's actuator. The boom will lower as you press up and hold the lever. Release the red lever once you have lowered the boom to a safe position.



Control Box: Usage information

The control box of **SGA-440** lift having LCD display to have some basic usage information on the display. Following information will be visible on the LCD display of control box.



When it is time for service the service symbol will appear on the display will light up and give notice to users about the need for service.



If the lift stops because of overload, the symbol will appear on the display and give user the information about why the lift is stopped.



If someone tries to use the lift while mains plugged in, the symbol will appear on the display. The user receives the information about why the lift is not working. Usage of lift while charging is not possible.



The display showing a full battery symbol indicates that the battery is fully charged.



The display showing a half empty battery symbol indicates that it is time to charge the battery.



The display showing a empty battery symbol indicates that no battery is completely discharged.



The display showing a lifting actuator is moving up.




The display showing a lifting actuator is moving down.

Control Box: Service information

The control box of **SGA-440** lift having LCD display to have some basic service data on the display.

To get this information, press the “lifting arm up” button on hand control for half a second.

The information that appears on the display is as shown below.

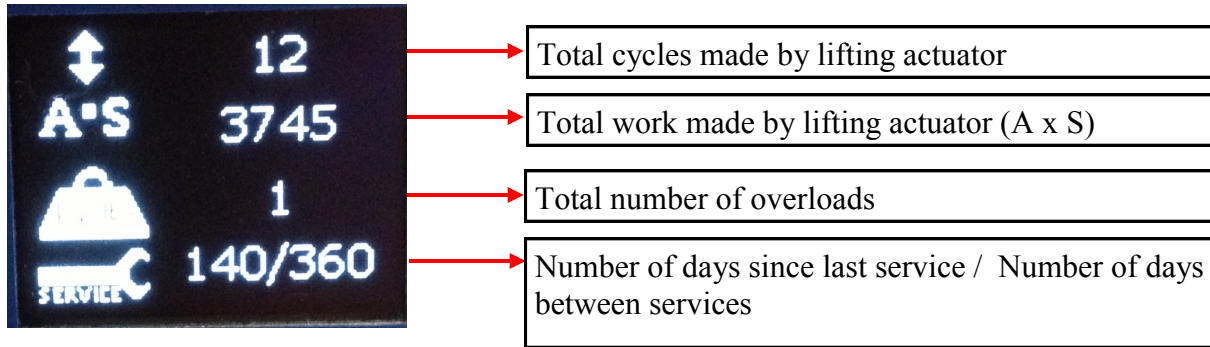

Total cycles made by lifting actuator:

One cycle is defined as; Moving with load (the actuator draws more than 1.5 Amps).

Moving direction up for a minimum of 5 seconds (several activations are allowed), followed by moving down for a minimum of 2 seconds.

Total work made by lifting actuator:

Work indicator for the lifting actuator measures via ampere usage x seconds in use.

The work indicator gives very good indication of how worn is the actuator. Typical minimum lifetime performance without abuse of the actuator is 10000 cycles in life test equals to 5,600,000 A x S.

Total number of over loads:


Counts the number of times the lifting actuator has been overloaded.

Resetting of Service interval after service has been carried out:

Resetting of service is done by pressing 2 buttons; Lifting arm UP, and lifting arm DOWN on the hand control at the same time for 5 seconds. After pressing the buttons for 5 seconds, you will receive an audio signal indicating that the timer has been reset. The timer will clear the display for service symbol, and start counting a new service period.

Technical Specifications– SGA-440 Sit to Stand Lift

Specifications for SGA-440 - Aluminum Sit to Stand Lift 440 lbs.

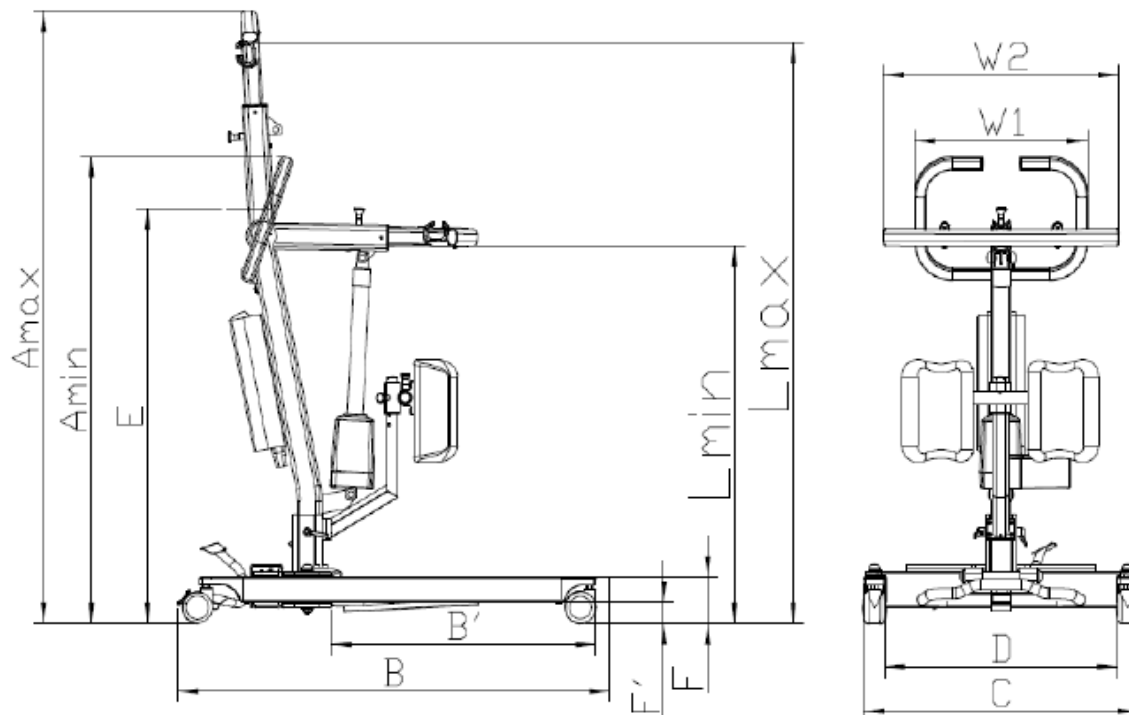

Max.load and weight in lbs. and Dimensions in inch.

Max. load	A		B	B'	C	D	F	F'	E	L		W1	W2	N.W.	Turning diameter
	Max.	Min.								Max.	Min.				
440	57.3	44	40.7	25.6	26.8 ~ 39	23 ~ 35	4.3	2	38.4	54.3	35.4	16.8	23	81	46

Max.load and weight in kg and Dimensions in cm.

Max. load	A		B	B'	C	D	F	F'	E	L		W1	W2	N.W.	Turning diameter
	Max.	Min.								Max.	Min.				
200	145.5	112	103.5	65	68~99	58~89	11	5	97.5	138	90	42.8	58.2	36.8	117

DO'S & DON'TS

DO

- ✓ Do charge the battery whenever possible. This will extend the battery life. A large number of cycles can be obtained from operating on the batteries, but battery lifetime is reduced with frequent discharging.
- ✓ Do inspect all cables particularly the mains power cable on the charger for any damage; replace where necessary.
- ✓ Do stow the handset and if fitted with charger, the mains power cable when transporting the hoist.
- ✓ Do clean the actuators, control box, charger, battery and handset at regular intervals to remove dust and dirt.

The exterior of the lift should only be cleaned, disinfected and sterilized using isopropyl alcohol. Damp a cloth with isopropyl alcohol and wipe down entire exterior of lift.
No other chemicals and/or liquids should be used to clean, disinfect and sterilize this lift.

 **Caution: Take great care to ensure that no liquids get inside the lift. This lift is not drip proof or water tight. Failure to protect the lift from liquids may result in damage to the lift and/or may cause personal injury.**

DON'T

- ✗ Don't allow the batteries to fully discharge before connecting to the charger. The batteries are a lead-acid gel cell type that can be trickled charged continuously (batteries used for standby) and have a high current discharge capacity. Life is greatly reduced by deep or complete discharging of the batteries. Longer lifetime is obtained by maintaining fully charged batteries.
- ✗ Don't continue to operate the handset by repeatedly pressing the buttons if the lift function will not move or the actuator will not function. If this occurs then the actuator has either reached its end position, the load is too great or there is a malfunction.
- ✗ Don't exert excessive force on the handset cable as this may break off the wires inside the cable and prevent some or all of the operations.
- ✗ Don't continually operate the hoist functions. The system is not designed for continuous operation. Continuous Operation will cause batteries to be deeply discharged or to damage the actuator or control box by overheating.

Trouble Shooting

Should problems arise with the use of the lift review the following chart. Find the fault and complete the recommended solution. If the fault is not found and/or the solution does not correct the problem contact your local Prism Medical authorized Service Provider for service immediately.

PROBLEM	SOLUTION
Lift cannot raise/lower, control box is not clicking.	• Hand control is not properly plugged in. • Hand control is defective. • Control box is defective. • Emergency button is not pushed in. • Mains cable is not plugged into the control box.
Lift cannot raise/lower, control box is clicking.	• Lifting actuator cord (1) is not fully plugged into slot (1) on the control box. • Lifting actuator is defective.
Emergency Lower button on control box does not lower.	• Lifting actuator cord (1) is not fully plugged into slot (1) on the control box. • Lifting actuator is defective. • Control box is defective.
Lift cannot spread or close legs.	• Foot Pedal is defective.
Cannot move lift.	• Rear caster brake is engaged. • Casters are defective.
Cannot tighten Mast into Base tube.	• Mast locking assembly are defective, replace with new Mast locking assembly .

General Inspection and Maintenance

A) Each Use - To be completed by User

- All functions on hand control are operational.

B) Semi-Annually - To be completed at least every 6 months.

Should any of these items fail the inspection do not use the lift. Contact Prism Medical Systems or your local qualified service technician for service.

- Complete the inspection as noted in the “Each Use” section above.

Also check the following:

- Battery charger functional.
- Weigh scale functional (if applicable).
- Casters are clean and free of debris.
- All bolts and attachment points are secure (see next page for “Points of Attachment”)
- Visual inspection of all weld points and cast components.
- Check operation of the emergency stop button.

C) Annually - To be completed at least every 12 months.

- Complete the inspection as noted in the “Semi-Annually” section above.

Also check the following:


- Perform a working load test of one (1) lifting cycle with the maximum load. This is in accordance to the periodic inspection requirements of ISO10535.
- Check functional operation of the emergency lowering mechanism.
- All bolts in connection with the carry bar must be inspected, greased and tightened. All defective or worn components must be replaced.
- Connection bolts/bearings between arm and mast to be inspected. All defective or worn components must be replaced.
- Leg spreading function to be tested and all bolts to be inspected. All defective or worn components must be replaced.
- Check that main actuator is functional.



This section to be only completed by a qualified service technician as authorized by Prism Medical Ltd. Use the provided service record history sheets to note findings during inspection.

SGA 440- Sit to Stand Lift - Points of Attachment

Use the described tools to tighten the bolts on a monthly basis in the areas shown.

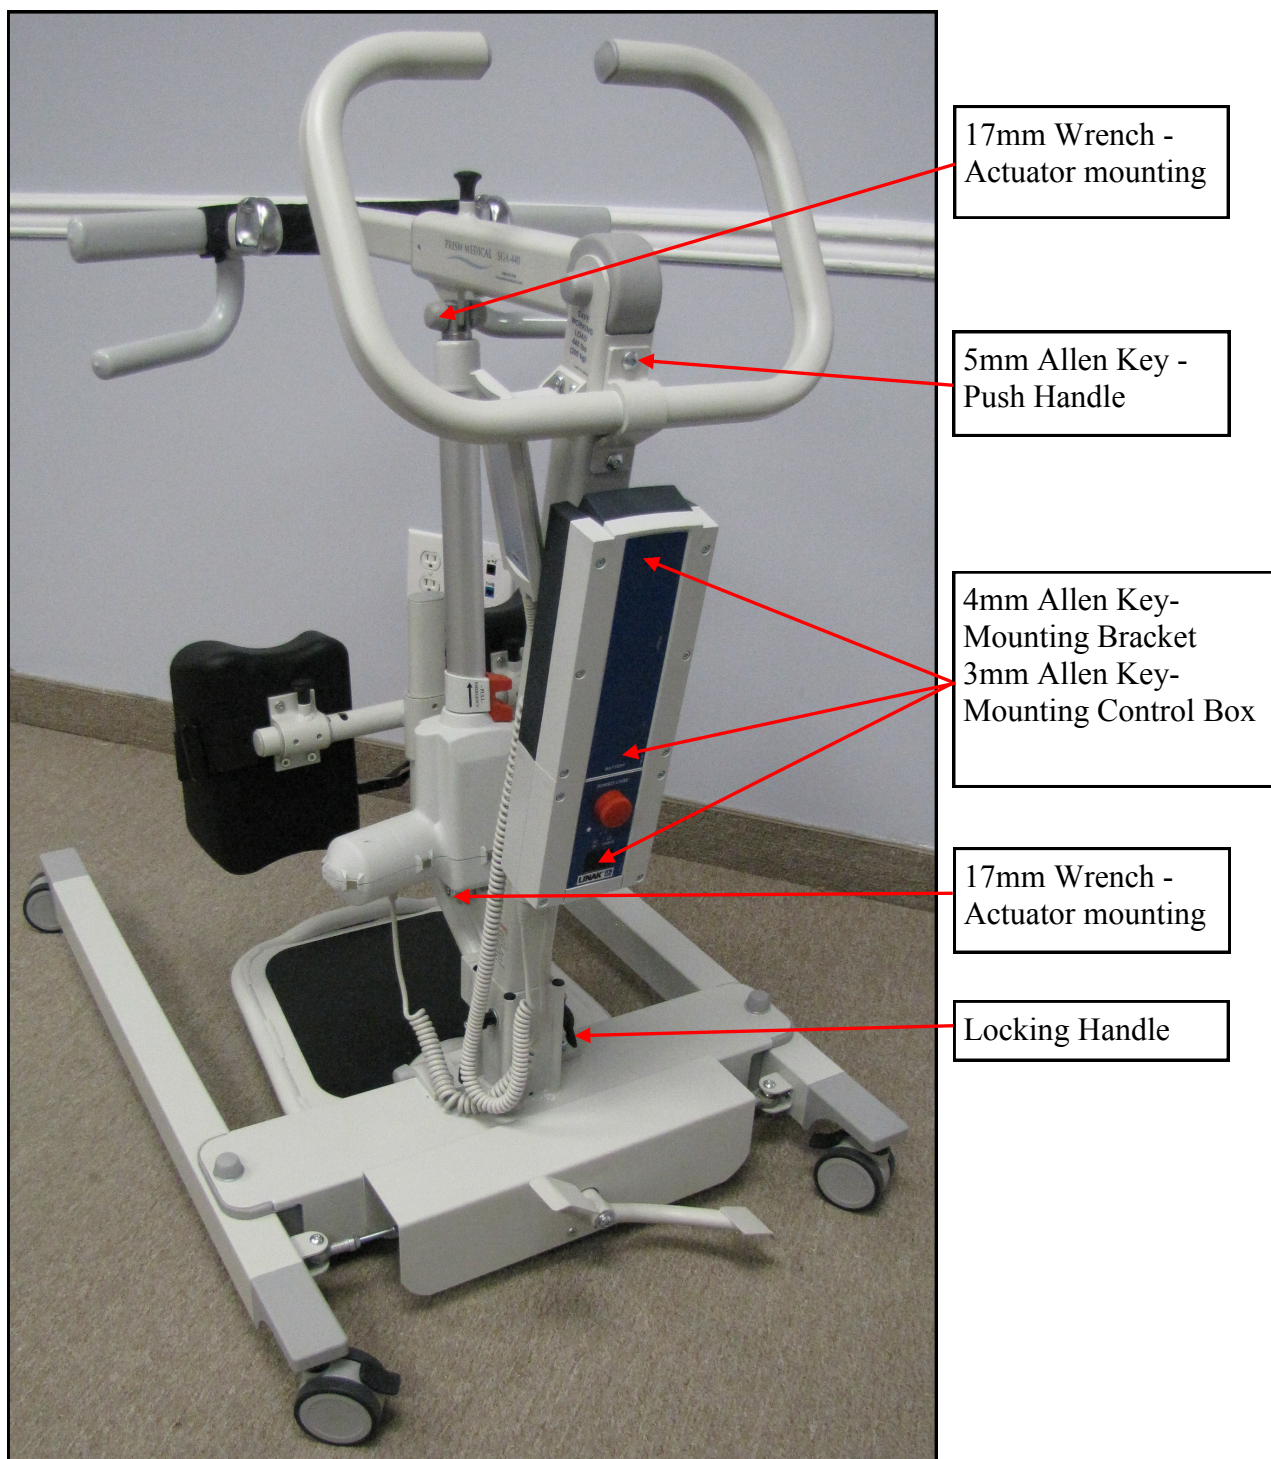

Service Record History - Initial Information

- Complete the following section on **Purchase and Service Information** as soon as this equipment is purchased.
- Use the service record history to record to any completed service and repairs.
- Ensure that the service record is signed and dated each time it is used.
- Be sure to have this piece of equipment serviced on a regular basis as described in the General Inspection and Maintenance Section.

PURCHASE INFORMATION:

Product Name: **SGA-440 Bariatric floor lift** **Model #:** _____
Serial #: _____

Date of Purchase: _____

Purchased From: _____
(local authorized Prism Medical Representative)

Address: _____

City: _____ **Postal Code:** _____

Telephone No: _____

Comments:

SERVICE INFORMATION:

Contact the following company for service:

Company: _____
(local authorized Prism Medical Representative)

Address: _____

City: _____ **Postal Code:** _____

Telephone No: _____

Comments:

Service Record History

Complete this section after each service, repair inspection and/or maintenance. Photocopy additional pages as required.

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Service Record History

Complete this section after each service, repair inspection and/or maintenance. Photocopy additional pages as required.

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Date: _____		Time: _____	
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____			
Completed By: _____		_____	
Printed Name		Signature	
Company: _____			
Remarks & Action Taken:			

Service Record History

Complete this section after each service, repair inspection and/or maintenance. Photocopy additional pages as required.

Date: _____	Time: _____
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____	
Completed By: _____	_____
Printed Name	Signature
Company: _____	
Remarks & Action Taken:	

Date: _____	Time: _____
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____	
Completed By: _____	_____
Printed Name	Signature
Company: _____	
Remarks & Action Taken:	

Date: _____	Time: _____
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____	
Completed By: _____	_____
Printed Name	Signature
Company: _____	
Remarks & Action Taken:	

Date: _____	Time: _____
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____	
Completed By: _____	_____
Printed Name	Signature
Company: _____	
Remarks & Action Taken:	

Date: _____	Time: _____
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____	
Completed By: _____	_____
Printed Name	Signature
Company: _____	
Remarks & Action Taken:	

Date: _____	Time: _____
Service Type: ☐ Periodic Inspection ☐ Monthly Inspection ☐ 6 Month Inspection ☐ Repair ☐ Yearly Inspection ☐ Other: _____	
Completed By: _____	_____
Printed Name	Signature
Company: _____	
Remarks & Action Taken:	

Warranty

This Warranty does not affect or in any way limit your Statutory Rights

- 1) Prism Medical guarantees all equipment supplied as new, against failure within the period of 1 year from date of purchase by virtue of defects in material or workmanship.
- 2) This warranty does not apply to failure attributable to normal wear and tear, damage by natural forces, user neglect or misuse or to deliberate destruction, or to batteries more than 90 days after original purchase.
- 3) This equipment warranty shall be void if the equipment is not serviced by Prism Medical or its authorized service agents in accordance with the manufacturer's recommendations or if any unauthorized person carries out works on the equipment.
- 4) The liability of Prism Medical under the terms of this guarantee shall be limited to the replacement of defective part (s) to the sales distributor, dealer, agent, person or entity which purchased the equipment from Prism Medical. In no event shall Prism Medical incur liability for any consequential or unforeseeable losses.

If you have any questions about the manufacture or operation
of this equipment, please contact
Waverley Glen, or your local authorized dealer.

PRISM MEDICAL



™ Trade-mark of Corven Health Care Inc. Used under licence.

E.& O.E.